

PLEASE READ

(info for All the Arcade Machine Players)



VERY IMPORTANT: If machine is OFF, make sure Power Button is also on position OFF. If button not in OFF position, then please switch Power Button to OFF, then wait 20 seconds before switching Power Button to ON.

Machine will never work (power up) if this rule is not respected. Don't switch Power Button ON & OFF continuously expecting success.

Private Property

This apartment is entirely privately owned and not a commercial space or an integral part of any Hotel. Therefore, also this arcade machine and all content belong to a private collection. As our guest you can use the machine during your stay. Machine & content are not for sale or for any type of distribution.

Support

This machine is a private object and does not have any type of technical support or obligation of support on our part. For any problem our help will always be based on our best effort and availability. Please report us any problems that arise with a Game (i.e., game name & system). We will try to verify and resolve as soon as possible.

Turning Machine Power OFF

To Power OFF the Arcade machine please follow always these 4 steps described below. **Not doing these steps in this exact order will probably damage files or running games and machine will not be able to run properly or even restart to main Game menus on next time is powered ON.**






This Video Arcade Machine is not a toy and should not be used by kids unless under permanent adult assistance.




IMPORTANT: Turning Machine Power ON after Power OFF (Please don't switch Power button to ON and OFF continuously)

After step "4" above, and machine Power in on position OFF, we need to wait about 15/20 seconds minimum before we can switch Power button to position ON.


Machine will NOT start if these 15/20 seconds are not respected. When switch Power button to position ON then wait some seconds for initial screen Logo and Arcade Menu. If nothing shows on screen after 1 or 2 minutes then press switch power button to OFF and wait 20 seconds. Only then you can turn power button to ON position and wait for new start and menu to show on screen.

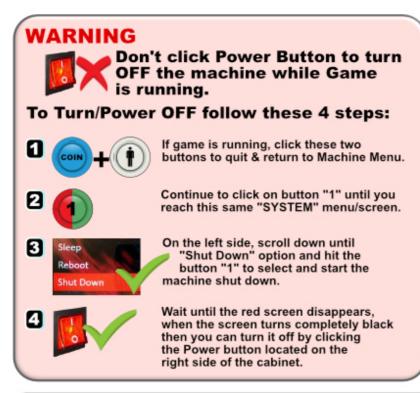

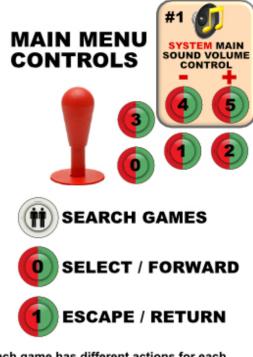

Each game has different actions for each button, you should check what actions are assigned to each button during the gameplay.



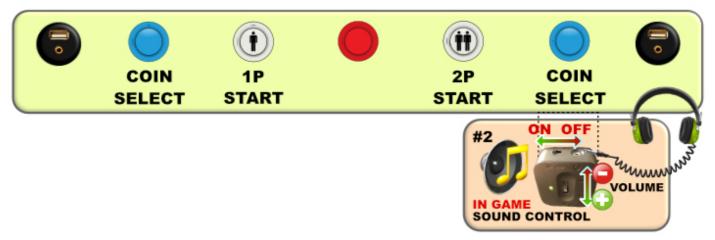

Errors on Arcade Machine Screen?

If for any reason an error or problem shows on machine screen then please **DON'T Power OFF** the machine, if possible, take a photo with your mobile phone and send us by WhatsApp so we can verify the problem and be able to provide eventual solution.